

# IZ600F Quick Start Guide

## CAUTION

Inex products must be mounted as described in their Installation Guides. If not, moisture problems may occur - which are not covered by the warranty.

See the [IZ600F](#) documents for full documentation and software.

You will need: Laptop with Windows 10 or above with Windows Feature NET 4.5 enabled, and a Chrome or Microsoft Edge browser.


You can use [IZ Discovery](#) to find the desired camera and change its network settings.

In the wiring diagrams, the dotted line boxes represent waterproof junction boxes used to enclose connections from the camera to the LAN (and external power supply, if used), and any unused connectors.


## Checklist

- ✓ Prepare components and tools
- ✓ Plan your site
- ✓ Prepare cables
- ✓ Install camera(s) and other components
- ✓ Connect components (wiring)
- ✓ Power up and set up IP
- ✓ Configure camera settings
- ✓ Aim and calibrate
- ✓ Verify system operation


## Camera with PoE Wiring Diagram

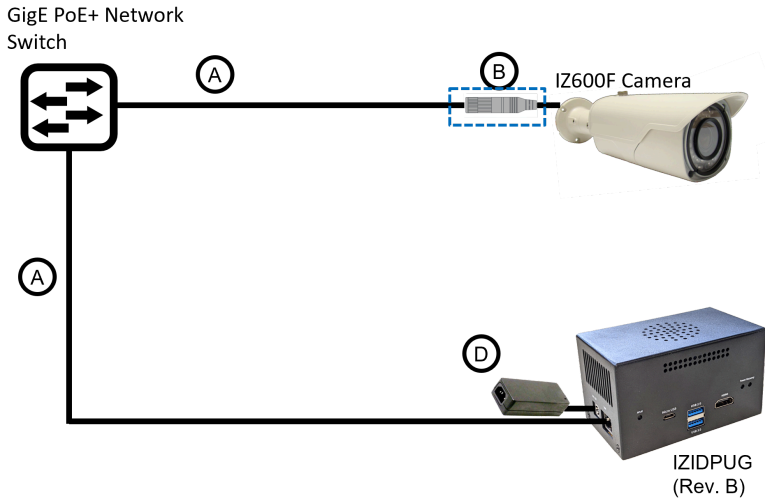


## Camera with Power Supply Wiring Diagram

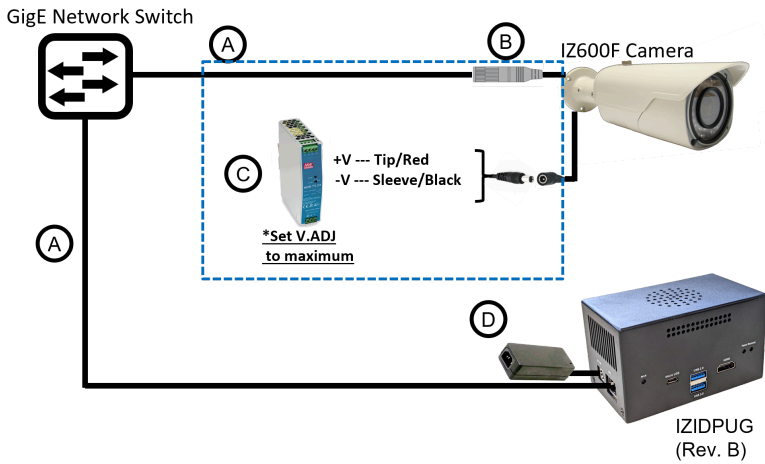

## Camera with Illuminator Wiring Diagram

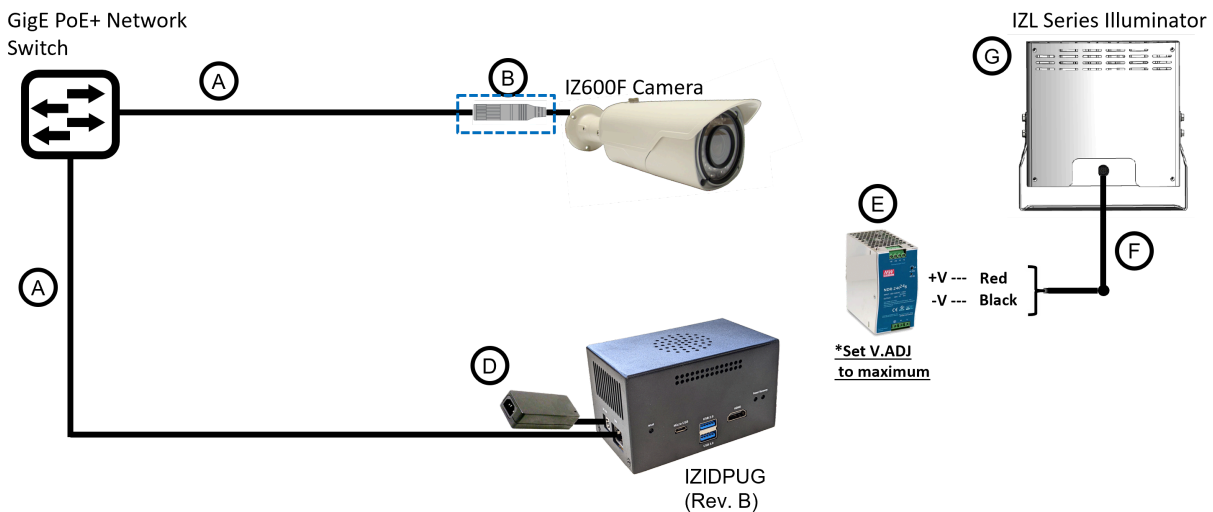

# Camera with Web Relay for Gate Control Wiring Diagram

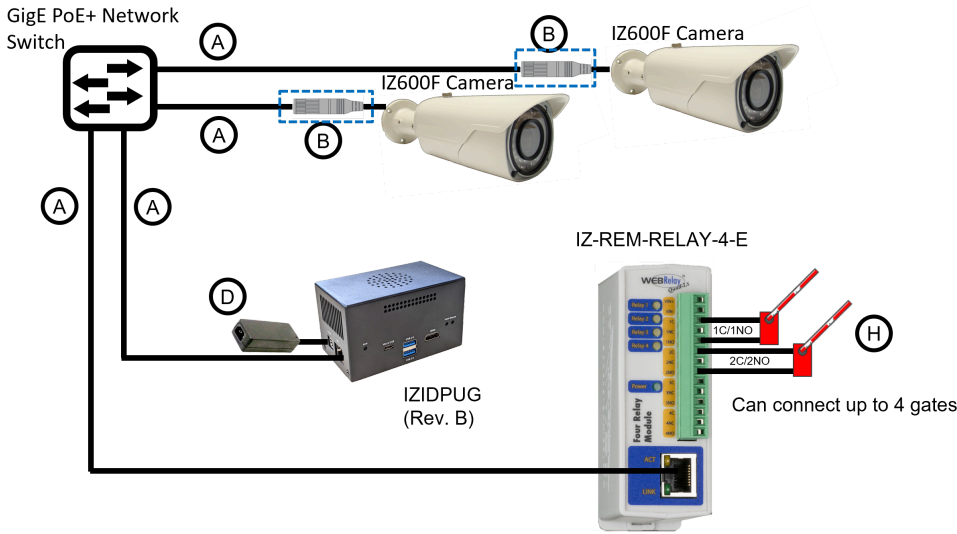

## Legend

Item	Description	Ordering Information
A	LAN Cables	Supplied by integrator
B	Waterproof Connection Box (Used to enclose connections from the camera to the LAN and external power supply)	Not included
C	Power Supply for Camera: 12 VDC, 50/75W; DIN rail Can power 2 cameras from a single power supply  Connect to camera with a male barrel connector 5.5 mm outer diameter, 2.1 mm inner diameter, or cut off connector and connect directly to red/black wires	Inex P/N: <a href="#">IZPWR75-12-MWL-DIN</a>
D	Power Supply for IZIDPUG (Rev. B)	Included with <a href="#">IZIDPUG</a>
E	Power Supply for Illuminator: 24 VDC, 100/120W or 240W; DIN rail	For IZL1, Inex P/N: <a href="#">IZPWR120-24-MWL-DIN</a> For IZL2, Inex P/N: <a href="#">IZPWR240-24-MWL-DIN</a>
F	Power/Signals Cable for Illuminator	Included with illuminator
G	<a href="#">IZL Illuminator</a>	Inex P/N: See the <a href="#">IZ600F Installation Guide</a> for a table of Camera-to-Illuminator Recommended Setups
H	Gates	Supplied by integrator

- For device configuration instructions, see the [IZ-REM-RELAY-4](#) documentation.

© Inex Technologies, LLC - All rights reserved. Specifications are subject to change without notice. All third-party trademarks are the property of their respective owners.

Doc. No. IZ600F-TECH-004 Ver. 2024-12-09

---

This page was built using the Antora default UI.

The source code for this UI is licensed under the terms of the MPL-2.0 license.